


# **Optilux NG CCT**

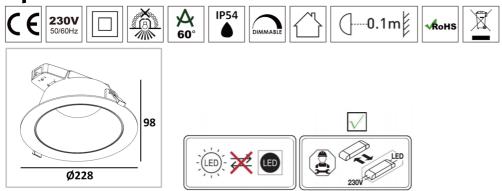

## **IMPORTANT INFORMATION:**

 
- 1. Please read this instruction carefully before installation and keep it for future reference.
- 2. Please conform to the instruction of equipment and installed by professional.
- 3. Make sure correct voltage applied before use and keep away from heat and vibration source.
- 4. The light source of this luminaire is not replaceable. When the light source reaches its end of life the whole luminaire shall be replaced.
- 5. The product is not suitable for any oil pollution ambient or related applications.
- 6. This product contains a light source of energy efficiency class **E**.
- 7. It shall not be disposed of as unsorted municipal waste.
- 8. For indoor and outdoor use under shelter.

 
## **MAIN PARAMETER:**

Product	221804
Rated Voltage	AC 220-240V 50/60Hz
LED watt	15,5W
System eff	18W
LED	SMD 2835 LED
LED Driver	Constant Current 220mA
Color Temperature	3000K-4000K-5000K
Protection	Class II
Beam Angle	60°
IP Rated	IP54
Operation Temperature	-25°C <ta<40°c< td=""></ta<40°c<>
Cut-out Size	Ø205mm
Product Size	Ø228mmxH98mm


### **INSTALLATION INSTRUCTIONS:**


- 1. Always switch off the power supply before installation.
- 2. Make sure all parts are ready when open the box and prepare the installation tools the lighting needs.
- 3. Should be installed by qualified electricians.
- 4. If there is any damage on the housing or glass cover, should view it as disqualified product that cannot be used.
- 5. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.






### **INSTALLATION STEPS:**

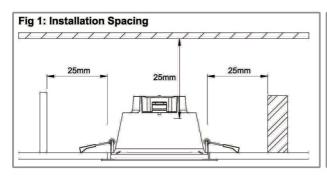


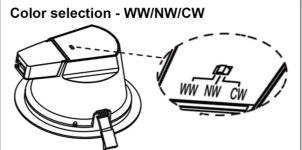


Select required luminaire color temperature (WW/NW/CW-3000K/4000K/5000K) before install the luminaire into ceiling.


1. Cut-out for the downlight. Open the lid of gear box.

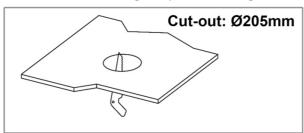

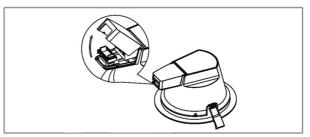

2. Connect Mains supply to the terminal block of luminaire. Push lid back to position and make sure it is securely locked.

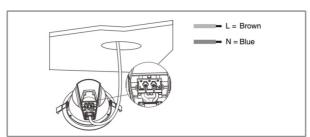

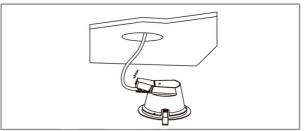

3. Slide the mounting spring clips into ceiling cut-out and push the luminaire up into cutting hole. Ensure that it is securely located. Switch on the power supply.

