


Bulkhead Øyelokk

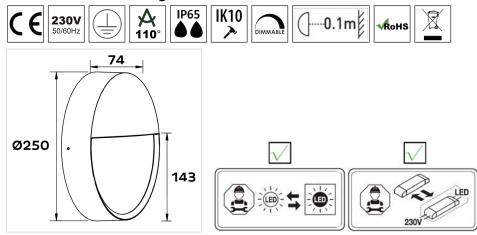

IMPORTANT INFORMATION:

- 1. Please read this instruction carefully before installation and keep it for future reference.
- 2. Please conform to the instruction of equipment and installed by professional.
- 3. Make sure correct voltage applied before use and keep away from heat and vibration source.
- 4. The light source of this luminaire is not replaceable. When the light source reaches its end of life the whole luminaire shall be replaced.
- 5. The product is not suitable for any oil pollution ambient or related applications.
- 6. This product contains a light source of energy efficiency class **G**.
- 7. It shall not be disposed of as unsorted municipal waste.
- 8. For indoor and outdoor use under shelter.


MAIN PARAMETER:

Article nr	261205
Rated Voltage	AC 220-240V 50/60Hz
LED watt	8W
System eff	10W
LED	Epistar SMD 2835 LED
LED Driver	115mA Constant Current
Color Temperature	3000К
Protection	Class I
Beam Angle	110°
IP Rated	IP65
Operation Temperature	-20°C <ta<45°c< td=""></ta<45°c<>
Product Size	Ø250mmx74mmx143mm

INSTALLATION INSTRUCTIONS:

 
- 1. Always switch off the power supply before installation.
- 2. Make sure all parts are ready when open the box and prepare the installation tools the lighting needs
- 3. Should be installed by qualified electricians.
- 4. If there is any damage on the housing or glass cover, should view it as disqualified product that cannot be used.
- 5. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.






INSTALLATION STEPS:

1. Select the required position for the luminaire.

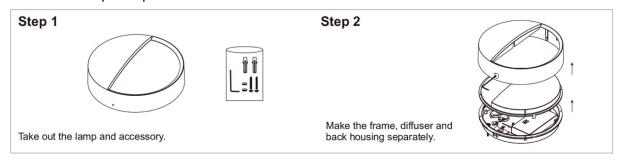


2. Ensure the luminaire is securely fixed to the wall.

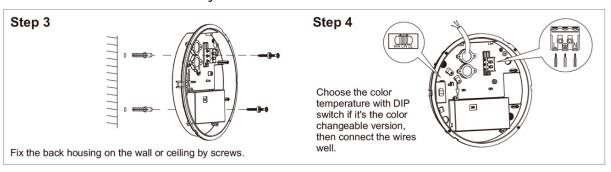

- 3. Connect Mains supply to the terminal block of luminaire.
 - Mains supply LIVE (Brown) L
 - Mains supply NEUTRAL (Blue) N
 - Mains supply EARTH (Yellow/Green) E (marked



IMPORTANT: The luminaire is Class I and must be earthed.

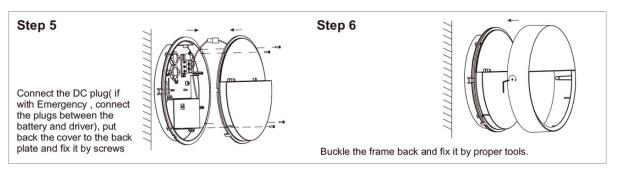

4. Switch on the power supply.

